



TUB DRAIN QUICK REFERENCE

WASTE & OVERFLOW FULL KIT: **NEW TUB INSTALL**

COMPLETE FULL KIT

LIFT & TURN



900-LT-PVC-__

PUSH PULL



900-PP-PVC-__

FOOT ACTUATED



900-FA-PVC-__

PRESFLO



900-PF-PVC-__

WASTE & OVERFLOW HALF KIT: **NEW TUB INSTALL**

COMPLETE HALF KIT

LIFT & TURN



901-LT-PVC-__

PUSH PULL



901-PP-PVC-__

FOOT ACTUATED



901-FA-PVC-__

PRESFLO



901-PF-PVC-__

CABLE WASTE & OVERFLOW: **GREAT FOR DEEP TUBS**

COMPLETE HALF KIT

TUBS 16" - 21" DEEP



971-CA-PVC-__

TUBS 24" - 34" DEEP



981-CA-PVC-__

TUBS 36" - 48" DEEP



991-CA-PVC-__

SQUARE OVERFLOW FACEPLATE: **GREAT FOR MODERN TUB SHAPES**

CP



Chrome

BN



Brushed Nickel

ORB



Oil Rubbed Bronze

WI



Matte Black




TUB DRAIN QUICK REFERENCE

WASTE & OVERFLOW QUICK TRIM: **REPAIR / REMODEL**

Works on any existing tub application. For changing finish or replacing old waste & overflow.

COMPLETE TRIM KIT

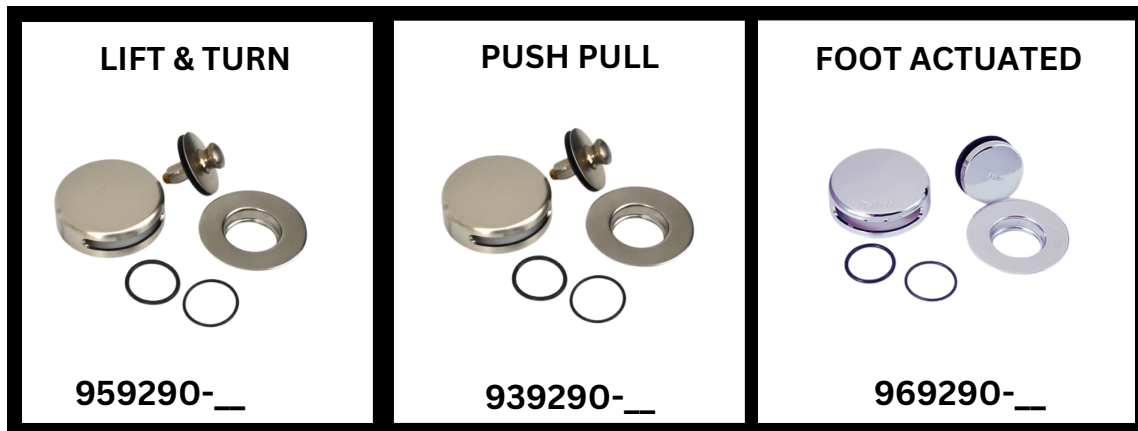


To order adapter bar and star nut, add "-11" to part number. (ie. 939290-BN-11)

WASTE & OVERFLOW NUFIT TRIM: **REPAIR / REMODEL**


Works on any existing tub application. For changing finish or replacing old waste & overflow.

COMPLETE TRIM KIT

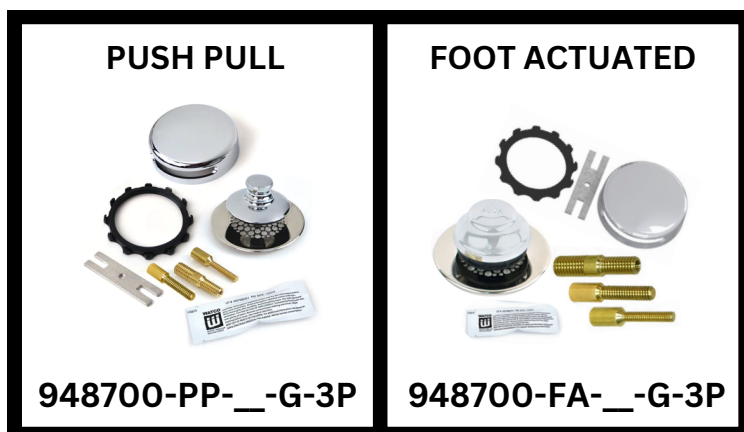

AVAILABLE FINISHES

- __ INDICATES WHERE FINISH SHOULD BE IN MODEL NUMBER

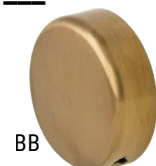

BB

Champagne Bronze



BN

Brushed Nickel



BS

Biscuit



BZ

Oil Rubbed Bronze



WH

White



CB

Chrome Brushed



CP

Chrome Plated



NP

Polished Nickel



PB

Polished Brass



WI

Matte Black



SB

Black Stainless